

Section:	Interface/PageHeader
----------	----------------------

At the top of almost each page of OMNI lies a common header composed by the following elements:

- Status line: the information displayed on the status line include the current system time, the IP address of the client connected to OMNI and some low level status information (system load, priority level of the cgi script). If the security options are enable, then the current login is also displayed as well as a link that must be used to switch user.
- List of stations in error state: each time OMNI displays a page, it checks the error state of all the running stations and the stations in error state are listed on a red background. Clicking on the name of the station in error opens the single station page.
- List of unassociated stations: here are listed on a yellow background the station that are detected by the Osiris dynamic routing system but presently not handled by OMNI. Clicking on the serial number of the station begins the association process. Note that if the security options are enable, than the list of unassociated stations is displayed only for the administrator.

If the device on which is running the client allows for it, moving the mouse on the links displays a tip with the current state of the station.

Sample header for a regular user with security options enable:

Current time: 2008.01.14-10:48:27, client=192.168.0.111, user=test [switch user](#) load: 2.70 1.40 1.04 22/204 30029 , n=-5

Pending alerts	650007	320001	310002	310002	RUEUX[680001]	370005	570001
----------------	--------	--------	--------	--------	---------------	--------	--------

Sample header for a regular user without security options enable:

Current time: 2008.01.14-10:48:27, client=192.168.0.111, _load: 2.70 1.40 1.04 22/204 30029 , n=-5

Pending alerts	650007	320001	310002	310002	RUEUX[680001]	370005	570001
Unassociated	310002						