

Section:	Interface/MainPage
----------	--------------------

The main OMNI page expects the user to select the entry points between the followings:

- Supervisor: check the stations, view health monitoring parameters, display maps
- Data center: select data, view seismograms
- Configurator: manage settings and station parameters, manage stations by groups

Note that if the security options are enabled, only the administrator is able to enter the configurator.