

Section:	Interface/Supervisor
----------	----------------------

The supervisor helps the user to check stations and control the evolution of key parameters. In case of failure, the supervisor provides all the necessary information to clearly identify the cause of the problem.

The supervisor first proposes links to the station and connectivity maps described in section Interface/Maps.

Then the health state for each running station is displayed in two sections.

The first section displays a small image (a tile) representing the station (see section Interface/StationTile for details). Each image is a link to the single station page (see section Interface/SingleStation).

The second section displays the stations in a table with the most important parameters: station identification, power state, data throughput, and time informations.