

Section:	Interface/Association
----------	-----------------------

The unassociated stations appear in the header of each page on a yellow background. A station is considered unassociated when none of the configured stations have the same serial number. Clicking on the serial number displayed starts the association process:

1. OMNI checks that the station answers to a ping request; 10 packets are sent, the result is displayed and the user should continue only if the station is actually reachable.
2. Following the link “Continue association” opens a short form where the user can:
 - set the station name (or leave the default one by leaving the field empty)
 - build a new group based on the default configuration overloaded by the present station configuration or immediately move the station in a group
 - optionally send a calibration request (single pulse, 1 pulse per second during 1 minute)
3. The user should press on the button named with the serial number of the station to validate the association.

Then, OMNI starts the management of the new station.